




Home of the Cool Breeze **Heater/Cooler** Air Top

*2000+ Club Car Installation*

1. Remove old top
2. Drill 5/16" hole in top left bend of front support and at the bottom bend. Drill 5/16" hole into body of cart below the hole drilled at the bottom of the bend. Strip 2" of insulation from the wires and twist wires tight so the wire does not become tangled in the support post.
3. Run wire down left post and pull through. Leave 6" of wire on top for connecting to unit power leads.
4. Pull wires through the previously drilled 5/16" hole under bottom of left support post and thread the wire through the hole, through the body, under the chassis, and into battery compartment for wiring.
5. Find the two batteries that are going to be used to connect the unit. Measure the appropriate distance to the batteries and add the fuse block to the positive side as the diagram shows.

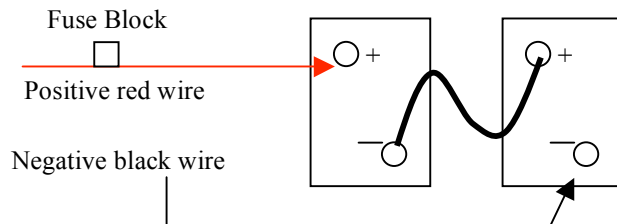

6. Install frame to existing supports using 5/16" x 2 1/2" truss head bolts provided and tighten. Re-drill existing supports bars with a 5/16" drill bit. Not all uprights that come out of the factory are mounted the same, make sure new frame is level and mount onto uprights. Depending on the uprights in the rear, they might have to bolt onto the top side of the rear upright. Find best position and bolt. Once frame is attached to supports, loosely place Cool Top on the frame.
7. Connect power wires from Cool Top to the hook up wires from the left support post using butt connectors. The black wire is the negative and red wire is positive coming from the unit. Connect the black wire (negative) to the black side of the hook up wire. Do the same for the positive side.
8. Once all wires are connected, use the #8 x 3/4" self tapping screws for the outside of the Cool Top to reinforce the top onto the frame. Evenly distribute self tappers to the front and 3 to the rear. The sides will take 2 self tappers evenly distributed to the center of the Cool Top.
9. Attach the positive blower wire (red) and the positive wire from the battery (red) to rocker switch on panel and install panel, using screw taped to the inside of panel.
10. If unit is equipped with a speed control (rheostat), connect the red wire from blower to the male connector on the speed control. The red hookup wire from bow attaches to the other side of the switch.

**\*\*\*For technical questions please call Cool Breeze: 760-340-6131 • Mon - Fri 8:00am - 4:30 pm PST**

**TO ORDER, PLEASE CONTACT PATIO COMFORTS AT:**  
[CustomerService@PatioComforts.com](mailto:CustomerService@PatioComforts.com) • <http://www.patiocomforts.com>

Local: 512-494-5450 • Toll-Free: 877-264-3794