




Home of the Cool Breeze Heater/Cooler Air Top

2004+ Club Car Precedent Installation

1. Familiarize yourself with all included instructions before removing old roof and starting installation.
2. Drill 5/16" hole in top left bend of front support and at the bottom bend. On the lower part of the front left support, remove cover and drill 5/16" hole into side of body.
3. Strip 2" of insulation from the wires and twist wires tight so the wire does not become tangled in the support post. Run wires down left post and pull through. Leave 6" of wire on top for connecting to power leads from unit.
4. Pull wires through the previously drilled 5/16" hole under bottom of left support post and thread the wire through the hole, through the body, under the chassis, and into battery compartment for wiring.
5. Connect the Black Negative wire to the Main Negative on the controller. Follow that Negative wire coming out of the controller to the battery and connect Red Positive wire to the Positive side of the battery. Measure the appropriate distance to the battery and add the fuse block to the positive side as the diagram shows.

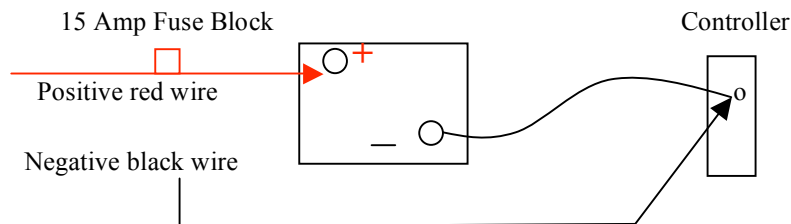

6. Mount frame support to the rear uprights and place OEM bolts through holes in plastic uprights. Once in place, clamp the front of the frame to the front uprights and drill through frame. Secure using 5/16" x 2 1/2" truss head bolts and nuts provided and tighten.
7. Once frame is attached to supports, loosely place Cool Top on the frame.
8. Connect power wires from Cool Top to the hook up wires from the left support post using butt connectors. The black wire is the negative and red wire is positive coming from the unit. Connect the black wire (negative) to the black side of the hook up wire. Do the same for the positive side.
9. Once all wires are connected, use the #8 x 3/4" self tapping screws for the outside of the Cool Top to reinforce the top onto the frame. Evenly distribute 3 self tappers to the front and 3 to the rear. The sides will take 2 self tappers evenly distributed to the center of the Cool Top.
10. Attach the positive blower wire (red) and the positive wire from the battery (red) to rocker switch on panel and install panel, using screw taped to the inside of panel.
11. If unit is equipped with a speed control (rheostat), connect the red wire from blower to the male connector on the speed control. The red hookup wire from bow attaches to the other side of the switch.

For technical questions please call Cool Breeze: 760-340-6131 • Mon - Fri 8:00am - 4:30 pm PST

TO ORDER, PLEASE CONTACT PATIO COMFORTS AT:

CustomerService@PatioComforts.com • <http://www.patiocomforts.com>

Local: 512-494-5450 • Toll-Free: 877-264-3794